

GEN 2.4 LOCATION INDICATORS

The location indicators marked with an asterisk (*) cannot be used in the address component of aeronautical fixed service (AFS) messages.

1. ENCODE	
Location	Indicator
AL-UDAID AIR BASE	OTBH
DOHA FLIGHT INFORMATION REGION	OTDF
DOHA INTL	OTBD
DUKHAN AIR BASE	OTBT*
HAMAD INTL	OTHH
INTERNATIONAL NOTAM OFFICE	OTNO

2. DECODE	
Indicator	Location
OTBD	DOHA INTL
OTBH	AL-UDAID AIR BASE
OTBT*	DUKHAN AIR BASE
OTDF	DOHA FLIGHT INFORMATION REGION
OTHH	HAMAD INTL
OTNO	INTERNATIONAL NOTAM OFFICE

Intentionally Left Blank